

Manual Indus Neva

www.indus-bulklogistics.com

Indus Integrated Bulk Logistics - Koningsschot 41 - NL 3905 PR Veenendaal
T +31 (0)318 62 71 17 - F +31 (0)318 62 71 01 - info@indus-bulklogistics.com



Manual Indus Neva



Place the bottom part of the Indus Neva System on a flat, stable and hard surface



Position the 4 stacking poles of the Indus Neva system in the conical openings at the corners of the bottom part with the hooks on the upper side facing out



The Indus Neva System is now ready for positioning the Big Bag/FIBC



Position the empty Big Bag /FIBC or place the already filled Big Bag in the system



Attach the 4 lifting loops of the Big Bag/FIBC in this way at the **springhead-implementation**



ó



Attach the 4 lifting loops of the Big Bag/FIBC in this way at the **lockhead-implementation**



The Indus Neva System is now ready for use



Movement of Indus Neva Systems by a forklift truck (max. 2 x 1.500 kg.)



Stacked storage Indus Neva Systems (max. 4 x 1.500 kg.)



Bottom discharge with dosage and cut off possibility through the slide of the Indus Neva System



For taking out filled or empty Big Bags: make a quarter turn with the little black button on the bottom of the **springhead**. The power of the spring will then be raised and the lifting loops can be loosened



ó



For taking out filled or empty Big Bags: press on the bottom part of the black part of the **lockhead**. This can then be moved upwards and the lifting loops can be loosened



Storage of Indus Neva Systems if not in use or at return transport