



Instruction manual of replacing the parts of the springhead of the Indus Neva System





1. Remove the orange plastic security pin



2. Enlarge the space between black hook and orange part



3. Remove the black plastic hook-system incl. inside parts



4. Prepare the new parts of the hook-system



5. Assemble the spring and the black plastic cap





6. Put the spring with assembled cap inside the hook system and connect it to the lip with a screwdriver





7. Put the assembled hook-system inside the head of the stacking pole and strike it downwards with an hammer

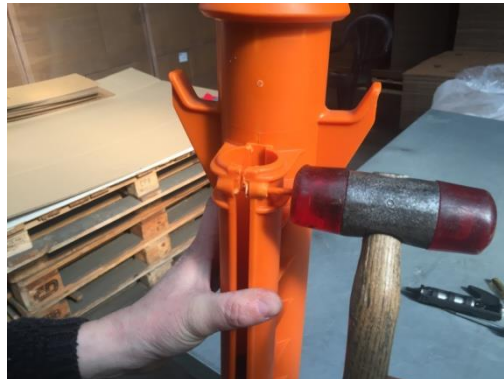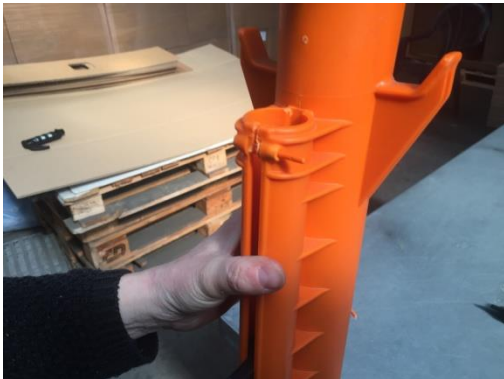

8. Put in a new plastic orange security pin and the head is fixed.